


Tech note

Adapters for non-Danfoss actuators with M30×1,5 thread connection

Ordering

Ste	m extension	Closing measure	Code No.
	0,5 mm	10,9 ±0,3	003Z0246 (5 pieces)
	1,0 mm	11,4 ±0,3	003Z0247 (5 pieces)
	1,5 mm	11,9 ±0,3	003Z0248 (5 pieces)
	2,0 mm	12,4 ±0,3	003Z0249 (5 pieces)
W2 W2	1,0 mm	9,4 ±0,3	003Z0257 (5 pieces)
	1,5 mm	8,9 ±0,3	003Z0258 (5 pieces)

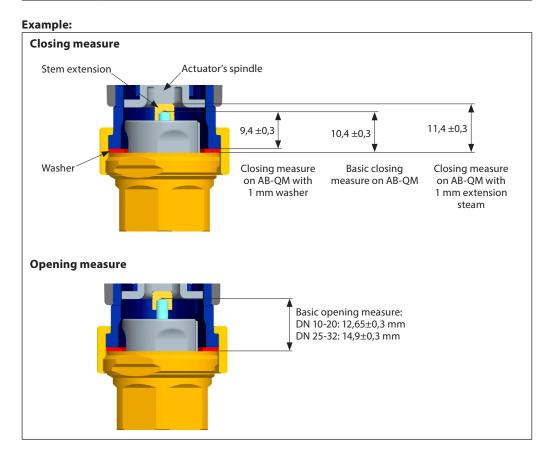



Data sheet

AB-QM - calculation, flow confirmation & pump optimisation

Data for non-Danfoss actuators

Actuator	AB-QM DN 10-20	AB-QM DN 25-32		
Honeywell				
M5410L1506	1,5 mm stem extension 003Z0248	1,5 mm stem extension 003Z0248		
M5410L4500	1,5 mm stem extension 003Z0248			
M4450A1009T	1,5 mm stem extension 003Z0248	1,5 mm stem extension 003Z0248		
Johnson Controls				
VA7450-####-03 (M30 × 1,5 connection !)	No adapters needed	No adapters needed Only 60 % of the flow (3,2 mm travel from actuator)		
Siemens				
STA 21(71)	2 mm stem extension 003Z0249 + washer 003Z0257	2 mm stem extension 003Z0249 + washer 003Z0257 Only 60 % of the flow		
SSA (M30 × 1,5 connection *)	No adapters needed	No adapters needed		
SSD61U 0-10 V	No adapters needed, due to 1,5mm min stroke min pre-setting 70 %	No adapters needed, due to 1.5mm min stroke min pre-setting 40 %, 5 mm stroke (opens 100 %)		
SSD61.5U 0-10 V (actuator has no DIP switch and works by default in inverse mode)	No adapters needed, due to 1,5mm min stroke min pre-setting 70 %	No adapters needed, due to 1.5mm min stroke min pre-setting 40 %, 5 mm stroke (opens 100 %)		
Sauter				
AXT211F110 230 V on/off AXS215SF122 24 V 0-10 V	No adapters needed, move DIP switch 2 to ON to decrease stroke to 3,2 mm	No adapters needed, move DIP switch 2 to OFF in order to keep stroke at 4,5 mm (opens 100 %)		
Theben				
CHEOPS control KNX	No adapters needed	No adapters needed, 7,5mm stroke (opens 100 %)		

^{*} For modulating version (SSA61) settings on AB-QM DN 10-20 should be at least 70 %, while on AB-QM DN 25-32 at least 35 %. Those settings will allow stroke of 1,5 requested to calibrate (closing and full open position) the actuator.

In order to secure compatibility between valve and actuator it is recommended that actuator supplier is asked to provide exact definition of maximum stroke and lower & upper point relative to spindle- nut position of the actuator to be used.

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed.

All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

2 **EN.C6.L4.02** Produced by Danfoss A/S © 10/2013